


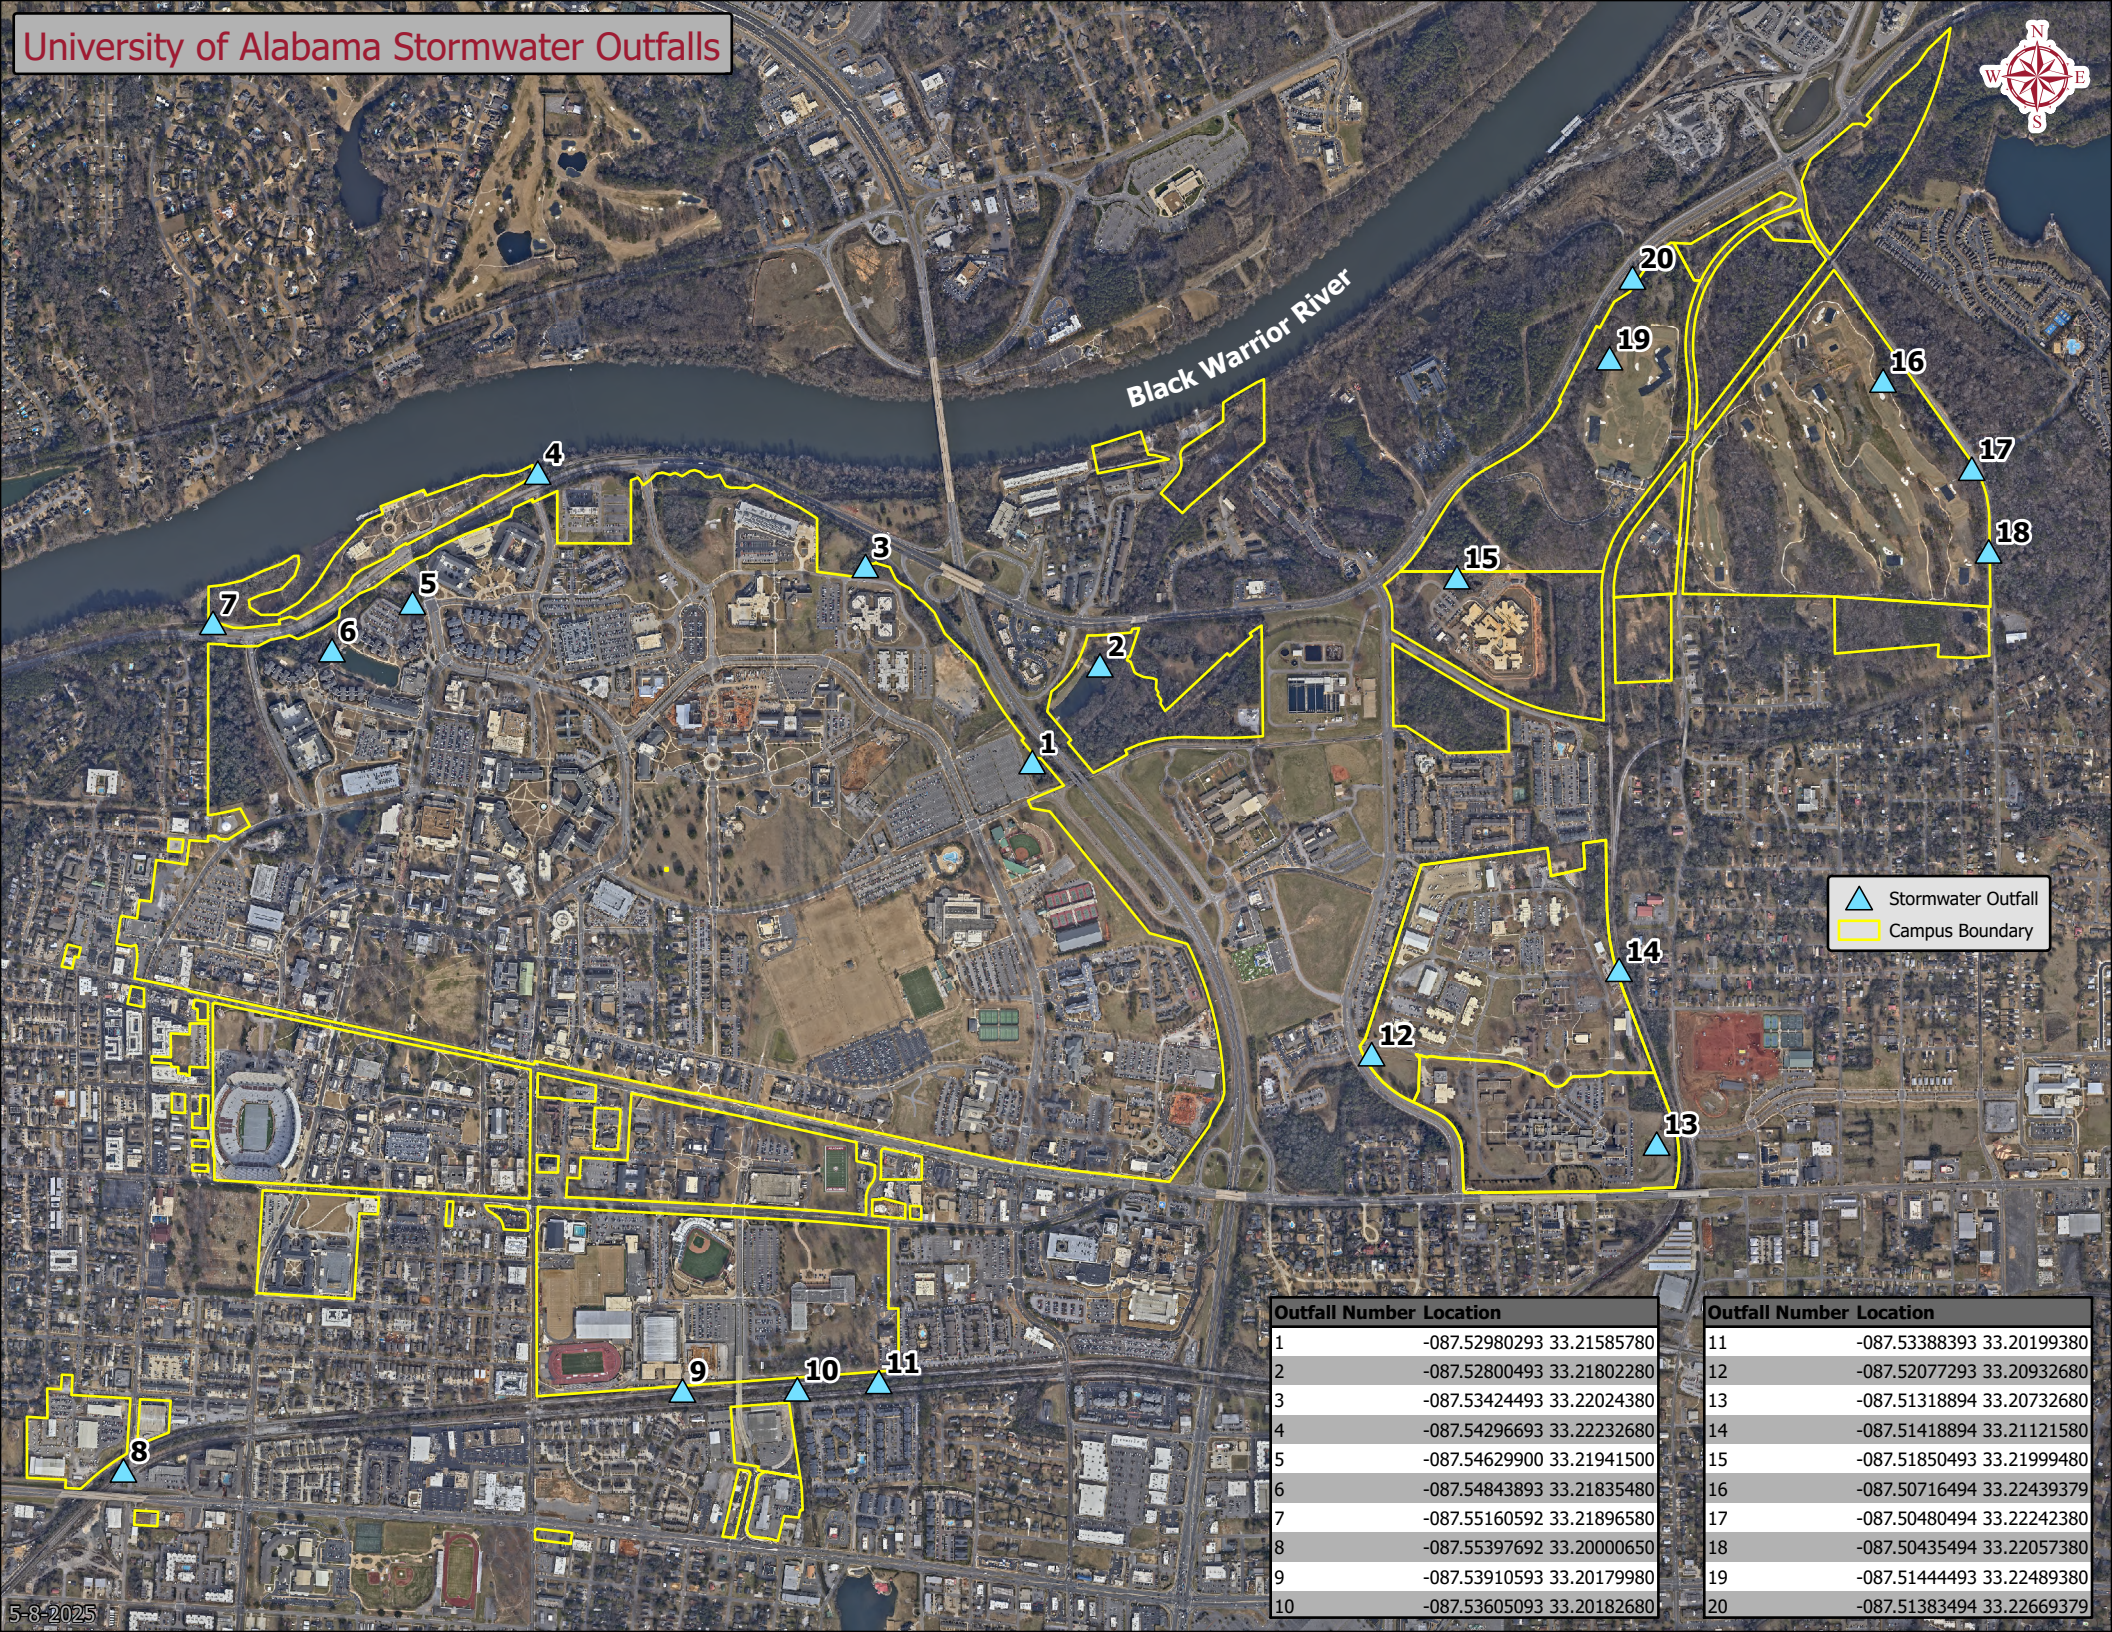

▲ Stormwater Outfall
▭ Campus Boundary

Outfall Number Location	
1	-087.52980293 33.21585780
2	-087.52800493 33.21802280
3	-087.53424493 33.22024380
4	-087.54296693 33.22232680
5	-087.54629900 33.21941500
6	-087.54843893 33.21835480
7	-087.55160592 33.21896580
8	-087.55397692 33.20000650
9	-087.53910593 33.20179980
10	-087.53605093 33.20182680

Outfall Number Location	
11	-087.53388393 33.20199380
12	-087.52077293 33.20932680
13	-087.51318894 33.20732680
14	-087.51418894 33.21121580
15	-087.51850493 33.21999480
16	-087.50716494 33.22439379
17	-087.50480494 33.22242380
18	-087.50435494 33.22057380
19	-087.51444493 33.22489380
20	-087.51383494 33.22669379